


# **COMFAST**

## **Quick Installation Guide**




Driver Installation  
M0305396 Version 1.0

无线网卡x1

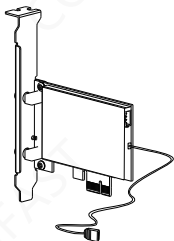

天线x1

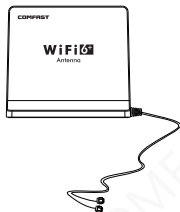

固定螺丝x1




蓝牙线x1






# 1 Hardware Installation

1.1 Insert the wireless adapter into the PCI-Ex1 slot (Also compatible with PCI-Ex4, PCI-Ex8, PCI-Ex16 slots) and screw the bezel.

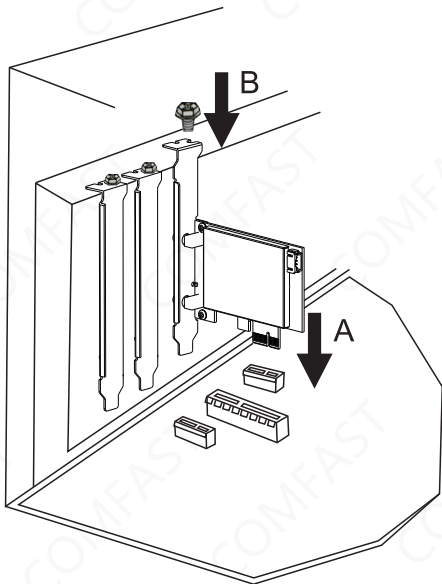




1.2 Plug the Bluetooth cable into the wireless adapter and the motherboard interface..

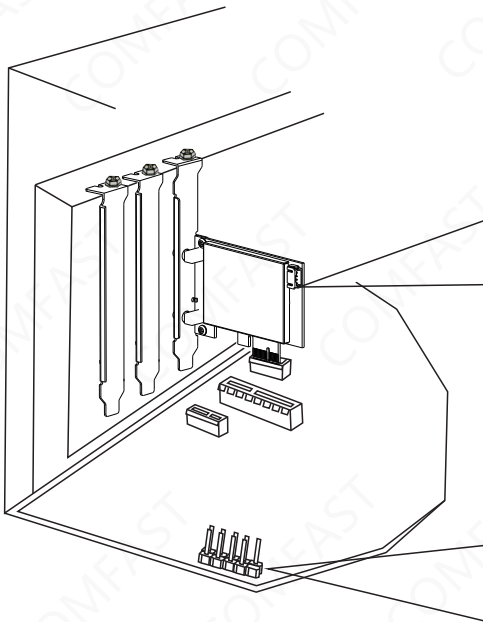

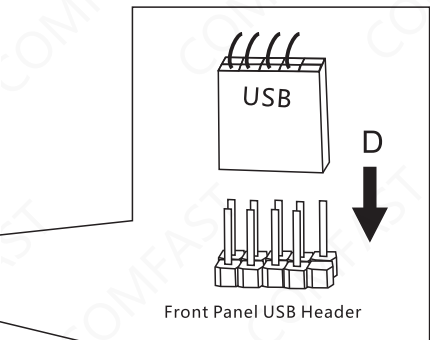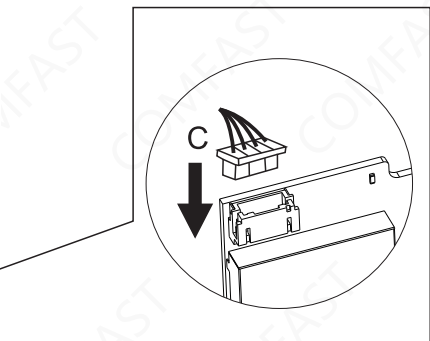

 
1.3 Plug the female ARGB light strip extension cord into the motherboard interface.

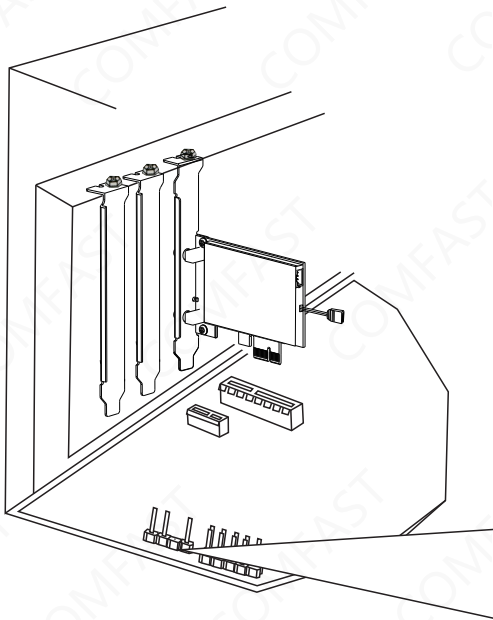

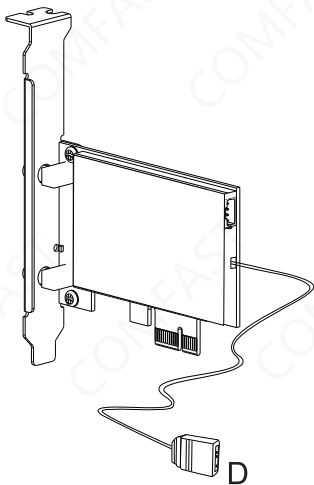

Front Panel 5V RGB Header

## 1.4 天线安装

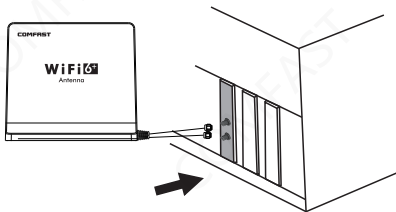

## 2 网卡驱动安装

2.1 请到COMFAST官网下载驱动，此安装方法以win10系统为例，打开对应的驱动文件夹，双击“WiFi\_21.30.3\_Driver64\_Win10.exe”运行安装程序，即可完成安装。（备注：如果安装文件是压缩包需解压才能安装）win10可在线更新驱动



**备注：**支持的操作系统win10(32位/64位)


### 驱动下载：

输入“<http://www.comfast.cn/>”，点击导航栏“下载帮助”，然后在搜索栏搜索产品型号，“点击下载”。



## 3 Bluetooth Driver Installation

3.1 Please download the driver from the COMFAST official website. This installation method uses win10 as an example. Open the corresponding driver folder, double-click "BT\_21.30.0\_64\_Win10.exe" to run the installation program, and click Next to complete the installation. (Note: if the installation file is a compressed package, you need to decompress it to install)

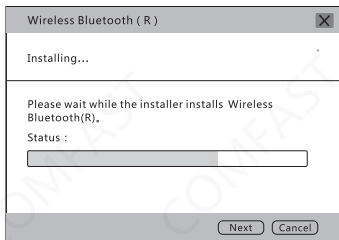

# Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing **COMFAST** products. To protect your rights and interests in after-sales service, please read the following maintenance regulations.

**The following does not belong to free maintenance, our company can provide paid service, please note:**

- Failure to require the installation manual, use, maintenance, storage led to product failure or damage;
- Beyond the limited warranty, the warranty period;  
Unauthorized alteration, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or oxidation product of serious, etc;
- Other non-product itself, design, technology, manufacturing, quality and other quality problems caused by the failure damage.

## Certificate Of Qualification

Quality Inspector \_\_\_\_\_

Production Date \_\_\_\_\_

Executive Standard \_\_\_\_\_



# Copyright Information

## Statement

**Shenzhen Four Seas Global Link Network  
Technology CO.,Ltd.Company  
all rights reserved.**

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

**COMFAST** is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network  
Technology Co.,Ltd.Company  
Address: Room 607-610,Block B Tao JINDI Electronic  
Business Incubation Base, Tenglong Road, Longhua  
District, Shenzhen, China  
Hotline: +86 755 83790059  
Website: en.comfast.com.cn