

# **COMFAST**

## **Quick Installation Guide**

 
 


SINMAX Wireless Bridge

Version : V1.0

# 1 Attention:Connection way

1.1 Before doing settings, we need to accurately know the device' s connection way. Then we can successfully get into the setting page. As it shown as below, when the device is power on, pls connect POE port with WAN port of the device and connect LAN port of the device with the computer. (After setting the working mode on the computer, if we want to connect with the camera, we need to connect the LAN port of the device with the camera.)

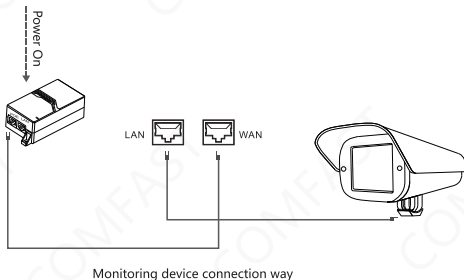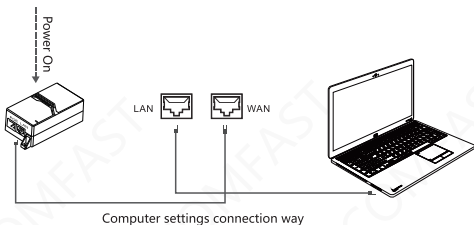

## 2 Connect your computer to the bridge

- ① Set your computer in static IP address "192.168.10.\*", and subnet mask in "255.255.255.0"
- ② Open web browser, and enter "192.168.10.1" to open the device management page.
- ③ The default login password is "admin".

## 3 Bridge pairing ways

### 3.1. Point to point pairing way:

- ①. Turn a wifi bridge's AP/STA switch to "AP", and another wifi bridge turn to "STA".
- ②. Short press "digital switch" on the wifi bridge to change the channel, each time you press the switch, the value on the digital display increases by one. Set both wifi bridges to the same value, and wait for the configuration to take effect, then the pairing is successful. After paired successfully, the signal light of the STA mode bridge will be adjusted accordingly to the connection signal strength.

 
### 3.2. Point to multi-points pairing way:

- ①. Turn a wifi bridge's AP/STA switch to "AP", and other wifi bridges turn to "STA".
- ②. Short press "digital switch" on the wifi bridge to change the channel, each time you press the switch, the value on the digital display increases by one. Set all the wifi bridges to the same value, and wait for the configuration to take effect, then the pairing is successful. After paired successfully, the signal light of the STA mode bridges will be adjusted accordingly to the connection signal strength.

## 4 Device management

### 4.1. Home page


After logging in to the device management page, the home page displays the working status of the device.

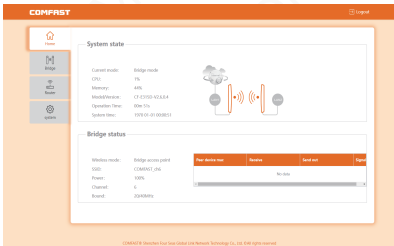


You can set the device in bridge mode or router mode in the management page.

### 4.2. Bridge Mode Configuration

 In bridge mode you can set up the device in Bridge apn mode (AP mode) and Bridge client mode (STA mode). After setting the parameters, click "Save effective" to complete the setting.

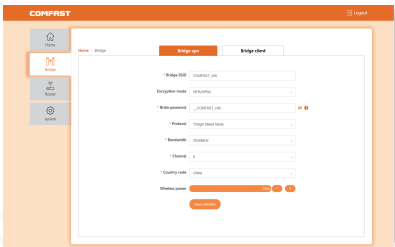


 In Bridge client setting, click “Scan”, wait for the scan listing and select the device you want to bridge in the listing, and enter the device’s password(if the device is encrypted). Click “Save effective” to complete the setting.

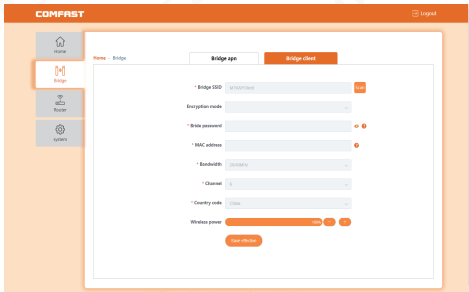


### 4.3. Router Mode Configuration

 Select “Auto retrieve” mode, and then click “Save effective” to complete the setting.

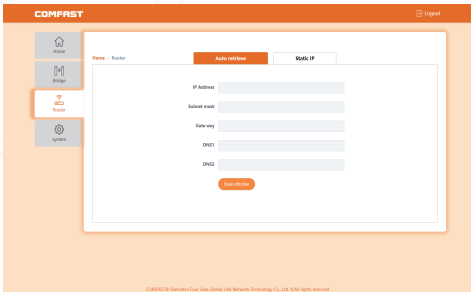

 Select "Static IP" mode, in this mode you need to fill in the IP address, subnet mask, gateway and DNS provided by your network service provider, and click "Save effective" to complete the setting.

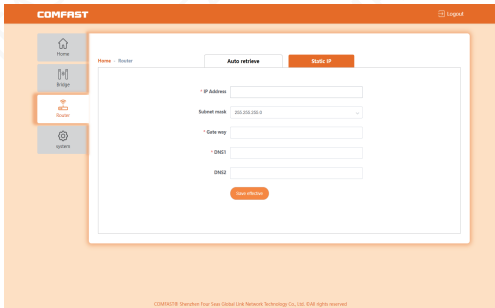

The screenshot displays the COMFAST web management interface. At the top, the "COMFAST" logo is on the left and a "Logout" button is on the right. A vertical sidebar on the left contains navigation icons for Home, Bridge, Router (highlighted in orange), and system. The main content area is titled "Home - Router" and features two tabs: "Auto retrieve" and "Static IP" (the active tab). Below the tabs is a configuration form with the following fields:

- IP Address:
- Subnet mask:
- Gate way:
- DNS1:
- DNS2:

At the bottom of the form is a "Save effective" button. The footer of the page contains the text: "COMFAST® Shenzhen Four Seas Global Link Network Technology Co., Ltd. All rights reserved."

# Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing a **COMFAST** products and service to protect your rights, please read the following maintenance regulations.

**The following does not belong to free maintenance ,our company can provide paid service ,please note:**

- Failure to require the installation manual , use ,maintenance, storage lead to product failure or damage;
- Beyond the limited warranty , the warranty period;  
Unauthorized alteration, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble without authorization;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or serious oxidation of product ,etc;
- Other non-product itself, design ,technology,manufacturing, quality and other quality problems caused by the failure damage.

## Certificate Of Qualification

Quality Inspector \_\_\_\_\_

Production Date \_\_\_\_\_

Executive Standard YD/T 1965-2009



# Quick Installation Guide

## Statement

**Shenzhen Four Seas Global Link Network  
Technology CO.,Ltd.Company  
all rights reserved.**

Without our official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

**COMFAST** is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network  
Technology Co.,Ltd.Company  
Address: Room 607-610,Block B Tao JINDI Electronic  
Business Incubation Base, Tenglong Road, Longhua  
District, Shenzhen, China  
Hotline: 4009-001-766  
Website: [en.comfast.com.cn](http://en.comfast.com.cn)