

COMFAST

Quick Installation Guide



Gigabit AC Gateway

Note: The different model of COMFAST Core Gateway you purchased may have difference in the product size, the length of mounting brackets, silk screen etc. Please refer to the actual product. This guide only provides operating instructions, and doesn't involve product specifications and appearance.


1 Appearance Description




2 Software Settings

2.1 Connect the power cord, and power on the device. After boot, the device will start itself, then the POWER indicator on the front panel will light up. Then connect the computer and the LAN port of device with a cable.

2.2 Enter the IP : 172.16.0.1 in the browser and get into the setting page (Google & Firefox browser is better)

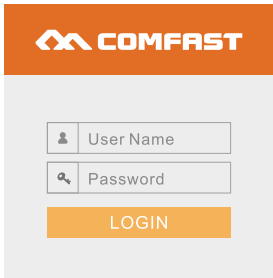

3.3 Enter user name and password "admin", and click "login" and get into setting page (the  icon on the upper right quarter is language setting, support "Chinese" and "English" selection)

The screenshot displays the 'STATUS LIST' page in the COMFAST web management system. The interface includes a left-hand navigation menu and a main content area with various system status metrics.

Navigation Menu:

- State
- Network
- AC Control
- Authentication
- Bandwidth Control
- Firewall
- Service
- Log and Statistics
- System Tools

System Information:

Information	Message
CPU	Intel® Atom™@1.80GHz
OS	OrangeOS
MAC	00F234089E26
Uptime	4m5s
Uptime	SMP Sat Jul 31 06:47:45 UTC 2018
Firmware Version	V3.0.0

Utilization:

- CPU: 0%
- Memory: 6%

Network Status:

- Upload: 1.31(KB)
- Download: 2.23(KB)
- TCP/UDP Sessions: 234
- Client Connections: 0

Interface Status:

Name	Designate	IP Address	Status
Interface0	WAN1	192.168.2.303	✓
Interface1	LAN1	172.16.0.1	✗
Interface2	LAN1	172.16.0.1	✗
Interface3	LAN1	172.16.0.1	✗
Interface4	LAN1	172.16.0.1	✗
Interface5	LAN1	172.16.0.1	✓

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.Company
all rights reserved.**

Without our official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network
Technology Co.,Ltd.Company
Address: Room 607-610,Block B Tao JINDI Electronic
Business Incubation Base, Tenglong Road, Longhua District,
Shenzhen, China
Hotline: 0755 83790059/83790659
Website: www.szcomfast.com