

COMFAST

Quick Installation Guide




Wireless Router
Version1.0


1 Connection Diagram

1.1 If use dial-up internet, pls follow up below connection steps 1.2.3.4; If use broadband internet, pls follow up below connection steps 2.3.4 and connect WAN port of wireless router to internet directly.

Dial-up Internet


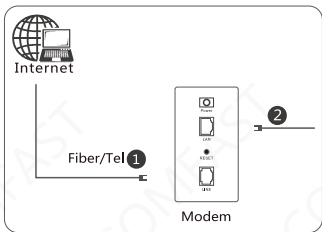


Broadband Internet

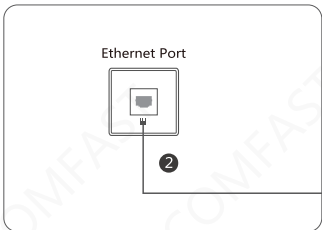

Wireless Connection


Scan wireless signal and the SSID is COMFAST_MAC last 6 numbers/

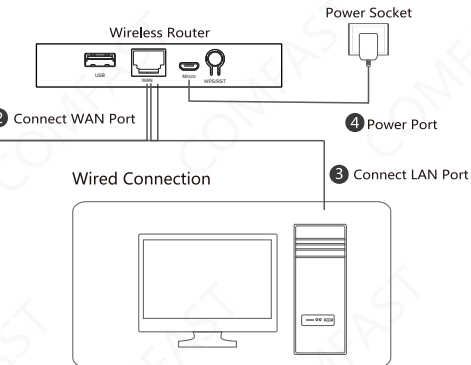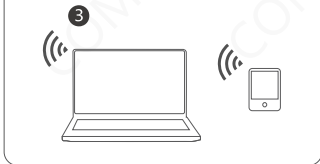

Note: the network port is set as WAN port by default. You can only access the 192.168.10.1 management page through wireless connection. In the relay mode, the network port is set as the LAN port, and the management page can be accessed through wired connection.


2 Setting Steps

2.1 Power on the device, wait for more than 20 seconds, wirelessly search SSID connection, enter IP to access the management page.

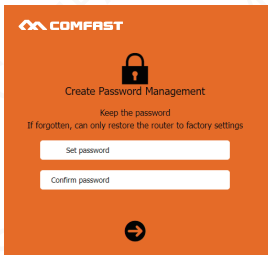


The screenshot shows the 'Create Password Management' screen of the COMFAST router. At the top left is the COMFAST logo. In the center, there is a padlock icon with a question mark inside. Below the icon, the text reads 'Create Password Management' and 'Keep the password. If forgotten, can only restore the router to factory settings'. There are two input fields: 'Set password' and 'Confirm password'. At the bottom center, there is a right-pointing arrow button.

2.2 Set the Internet access mode.

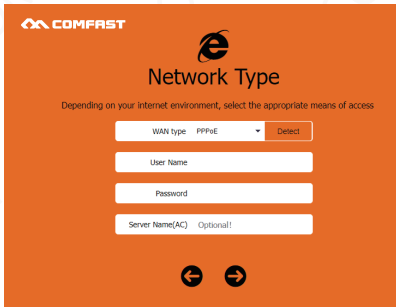


The screenshot shows the 'Network Type' screen of the COMFAST router. At the top left is the COMFAST logo. In the center, there is a stylized 'e' logo and the text 'Network Type'. Below this, it says 'Depending on your internet environment, select the appropriate means of access'. There are four input fields: 'WAN type' with a dropdown menu showing 'PPPoE' and a 'Detect' button, 'User Name', 'Password', and 'Server Name(AC) Optional!'. At the bottom center, there are two circular buttons, one with a left arrow and one with a right arrow.

2.3 Set wireless SSID.

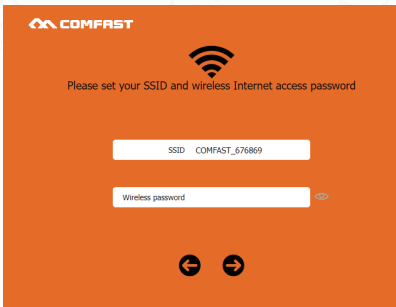




COMFAST



Please set your SSID and wireless Internet access password


SSID COMFAST_676869

Wireless password 


 

This screen shows the COMFAST wireless setup interface. It features a white background with a blue header containing the COMFAST logo. Below the logo is a Wi-Fi icon and the instruction "Please set your SSID and wireless Internet access password". There are two input fields: the first is labeled "SSID" and contains the text "COMFAST_676869"; the second is labeled "Wireless password" and has an eye icon to its right. At the bottom, there are two circular buttons with left and right arrows.

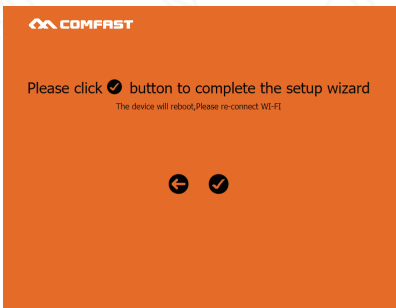

2.4 The setup wizard confirms.




COMFAST



Please click  button to complete the setup wizard

The device will reboot, Please re-connect WI-FI

This screen shows the COMFAST setup confirmation interface. It features a white background with a blue header containing the COMFAST logo. Below the logo is the instruction "Please click  button to complete the setup wizard" and the note "The device will reboot, Please re-connect WI-FI". At the bottom, there are two circular buttons: a left arrow and a checkmark.

2.4 Log in normally, enter the password and enter the home page.



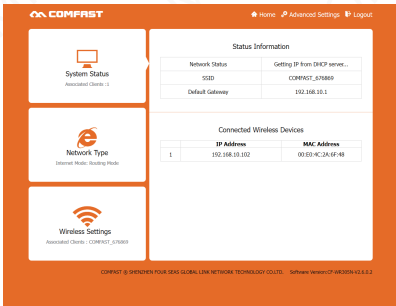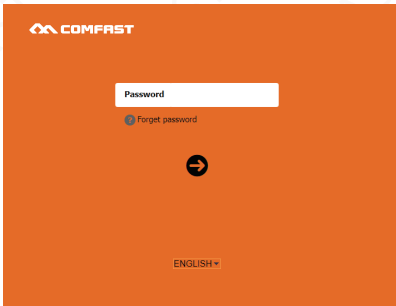

System Status

Associated Clients : 1



Network Type

Internet Mode: Routing Mode



Wireless Settings

Associated Clients : COMFAST_676869

Status: Getting IP from DHCP server...

WAN type: DHCP Detect

IP Address : 0.0.0.0

Subnet Mask : 0.0.0.0

Gateway : 0.0.0.0

SSID: COMFAST_676869

Wireless password



Save



System Status

Associated Clients : 1



Network Type

Internet Mode: Routing Mode



Wireless Settings

Associated Clients : COMFAST_676869

Device Info Setting

SSID: COMFAST_676869

Wireless password



Save

2.4 Relay mode > Advanced Settings > Wireless Settings > relay mode.

COMFAST

Home Advanced Settings Logout

Network Parameters

Wireless Settings

- Wireless Basic Setting
- Advanced
- Repeater

Advanced Users

Device Management

More Settings

Setup Wizard

Please select your primary need bridging router

wireless Name	MAC Address	EncryMode	Signal strength	Select
CF-AK3800-24G	88:88:99:00:00:25	NONE	100	<input checked="" type="radio"/>
Nice-2G	00:0c:43:36:ca:14 WPA,WPA2		100	<input type="radio"/>
G-test_2G	00:c7:c0:52:ee:c7 WPA,WPA2		100	<input type="radio"/>
103-Mesh-2G	40:40:a5:a5:12:7a WPA,WPA2		100	<input type="radio"/>
comfast-2G	e0:e1:a9:83:ad:f7 WPA,WPA2		100	<input type="radio"/>
304拾陆七零肆肆HONOR	e0:e1:a9:a0:32:61 WPA,WPA2		100	<input type="radio"/>
Mesh-2G	20:a0:33:22:11:02	NONE	100	<input type="radio"/>
HONOR S10A7X	90:98:38:45:90:18 WPA,WPA2		100	<input type="radio"/>
2	40:a5:af:47:ac:a6	NONE	100	<input type="radio"/>
630_test_a@1_2g	40:a5:ef:a1:10:a3	NONE	100	<input type="radio"/>

All Page 5 curPage 1 [Previous Page](#) [Next Page](#)

COMFAST © SHENZHEN FOUR SEAS GLOBAL LINK NETWORK TECHNOLOGY CO.LTD. Software Version:CF-WR305M-V2.6.3.2

3 FAQ

1. What should I do if I forget the password to log in to the device (how to reset the router)?

A. Forgetting the password to log in to the device can only restore the device to the factory default settings, which means reset. When the device is started, press the RESET button for about 7 seconds and release it to reset.

2. What if i can't open the administrator page of device in browser?

A. Please make sure the ip address of your computer is in the same network segment as the IP address of the device administrator page you typed in browser: for example, if your device default login IP address is 192.168.10.1, then the IP address of your computer should have been 192.168.10.x (x is any integer between 2 and 254);

B. Please make sure your browser setting is "Never dial a connection" and disable proxy; Here is the steps of configuration (suppose you use IE): Click "Tools"-"Internet Options"-"Connections", choose "Never dial a connection"; Click "Lan settings", remove the option of "Proxy server".

C. Try change another computer to log in: If all the 3 hints above can't help you, please do the Factory Reset Operation to the device and log in again.

3. Why my laptop can't search out the signal of Wi-Fi SSID?

A. If your laptop has network adapter built-in, please make sure the Wi-Fi function is enabled (we recommend you connect the laptop vendor or read the laptop user manual);

B. At device manager interface, check whether the driver of network adapter has been installed successfully;

C. Check whether the wifi service has been turned on, right click the icon "my computer" on your desktop, choose manage. In "Computer Management" wizard, click "Services and Applications", then on the page of "Service", find the item "Wireless Zero Configuration" and check its Status value.

D. Please make sure you've enabled the wifi capability and enabled SSID broadcast.

E. Get closer to the router and try search again, Avoid the factor of obstacles which reduce the intensity of signal; If the hints above can't help you, please check out whether another wireless network adapter can connected to the router. If it still don't work, please do the factory reset operation to restore the parameters back to their default values.

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network Technology CO.,Ltd.Company
all rights reserved.**

Without our official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means(electronic,mechanical,printing,recording or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network Technology Co.,Ltd.Company

Address: Room 607-610,Block B Tao JINDI Electronic Business Incubation Base, Tenglong Road, Longhua District, Shenzhen, China

Hotline: 4009-001-766

Website: en.comfast.com.cn